
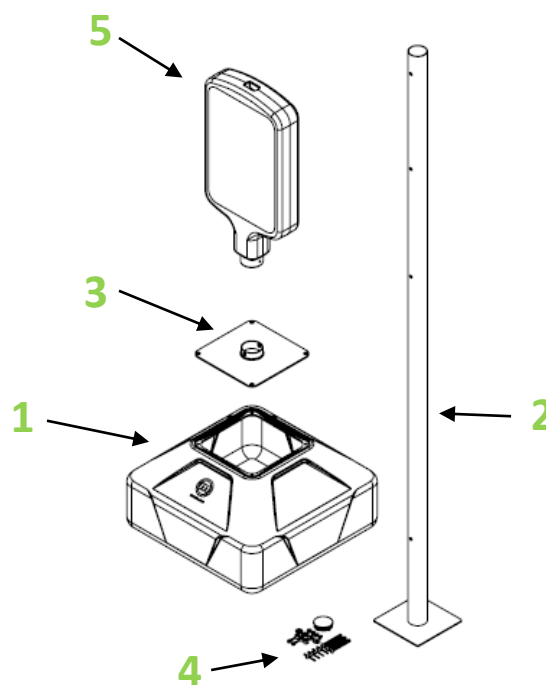


# BUMPER SIGN MOBILE

## BSM-###


### INSTALLATION INSTRUCTIONS

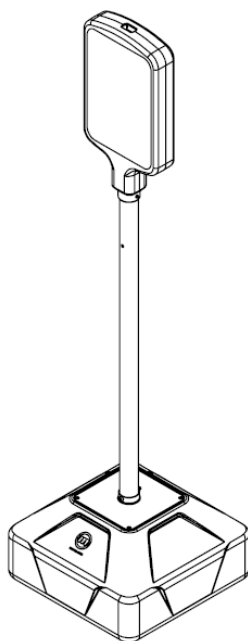

#### Components

**Note :** Not all hardware components provided will be used.

ITEM #	PART #	DESCRIPTION	QTY
1	BSM-BASE-###	BUMPERSIGN MOBILE POUR IN SIGN BASE	1
2	BSM-POST	BUMPERSIGN MOBILE POST	1
3	BSM-CAP-###	BUMPERSIGN MOBILE CAP	1
4	BSM-HARDWARE	BUMPERSIGN MOBILE HARDWARE KIT	1
5	15AB060-###	BS TOP MOLDED SHELL	1

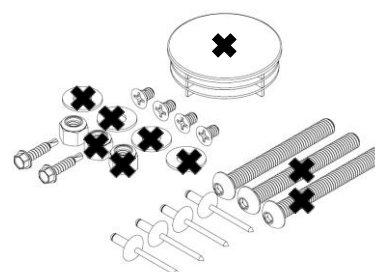

#### Tools Required



Drill with  
#11 Drill Bit  
3/8" Drill Bit




NUT DRIVER  
WITH 5/16" BIT



SCREWDRIVER



RIVET GUN

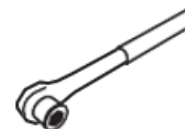

SOCKET WRENCH  
WITH 9/16" SOCKET



7/32" ALLEN KEY



Questions

**McCue Corporation**  
Peabody, Massachusetts, USA  
+1 (800) 800 8503  
[customer care@mccue.com](mailto:customer care@mccue.com)


**McCue UK & Europe**  
Milton Keynes, United Kingdom  
+44 (0)1908 365 511  
[uksales@mccue.com](mailto:uksales@mccue.com)

**McCue Asia**  
迈客(厦门)有限公司  
Xiamen, Fujian, China  
+86-592-2200790

[mccue.com](http://mccue.com)




1

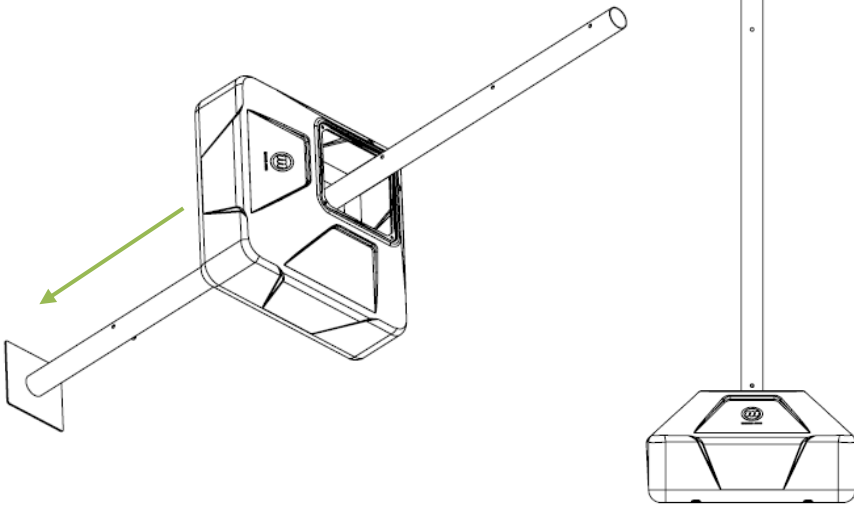

- Slide base over post



2

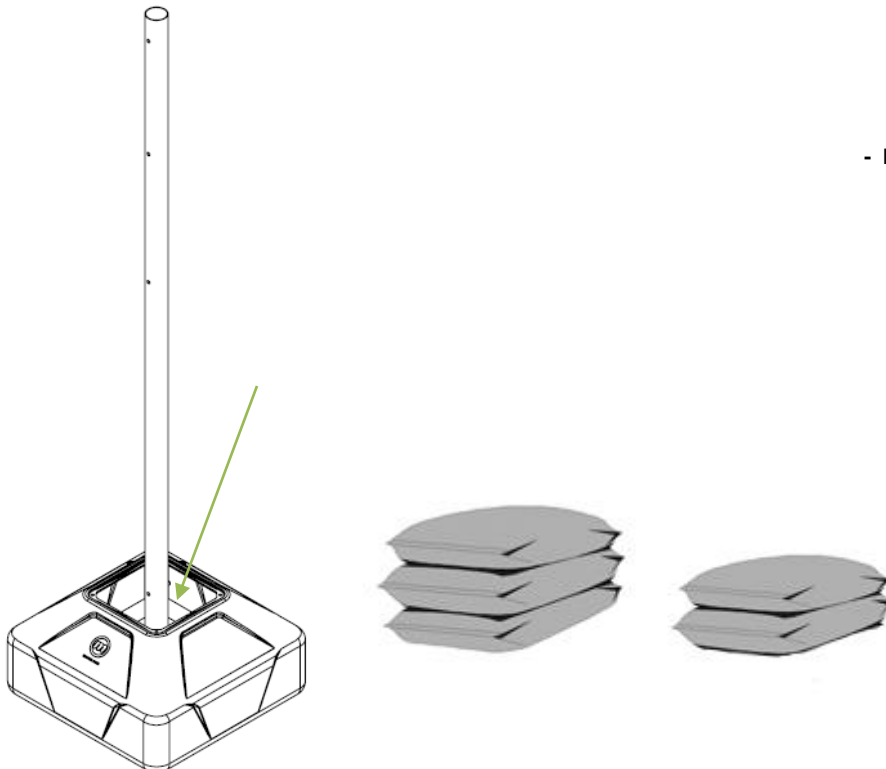

- Fill base with 250LBs of crushed Stone


3

- Slide cover over post and into place

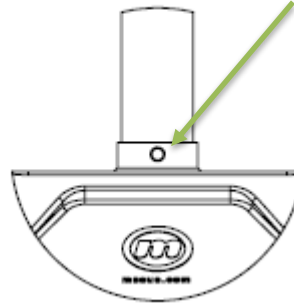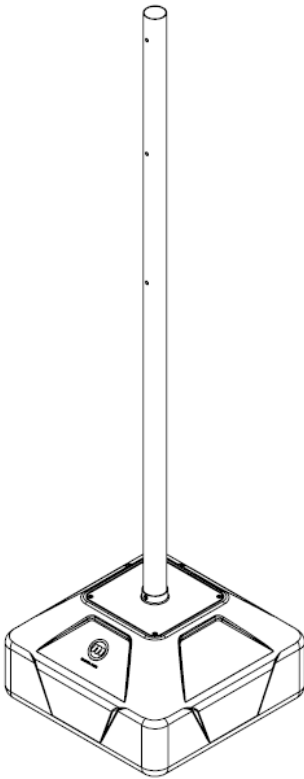


4

- Secure the cover to the base with 4 flat head screws

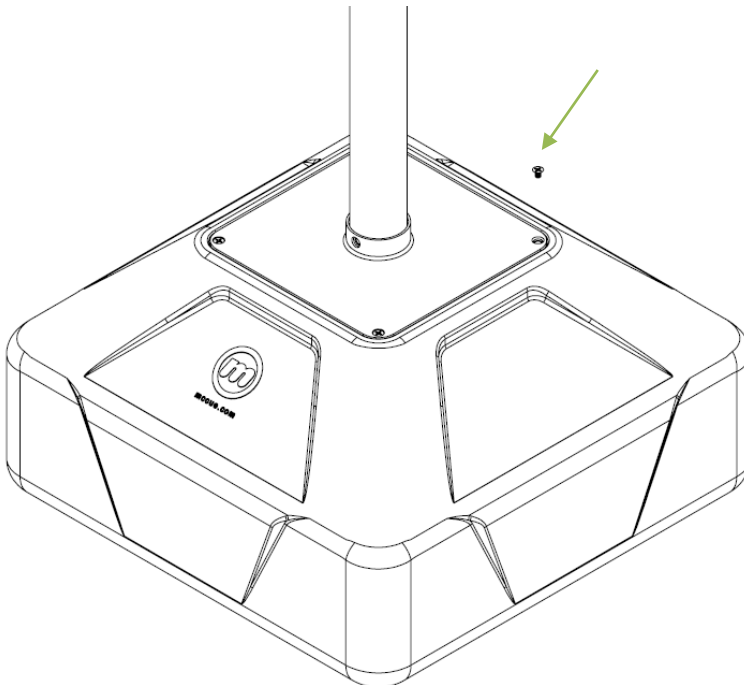

5


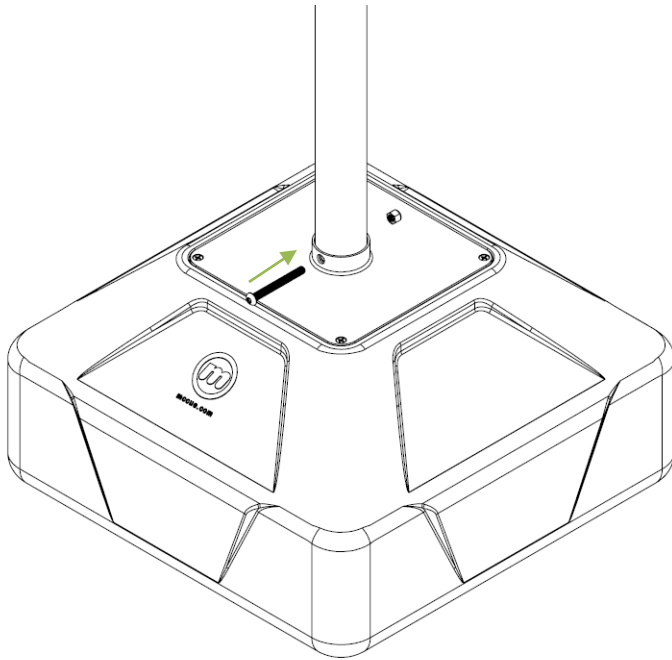


- Insert the 3/8" bolt through the cover and post and secure with a lock nut on the other side.


6

## Install placards

Note : Placards not included

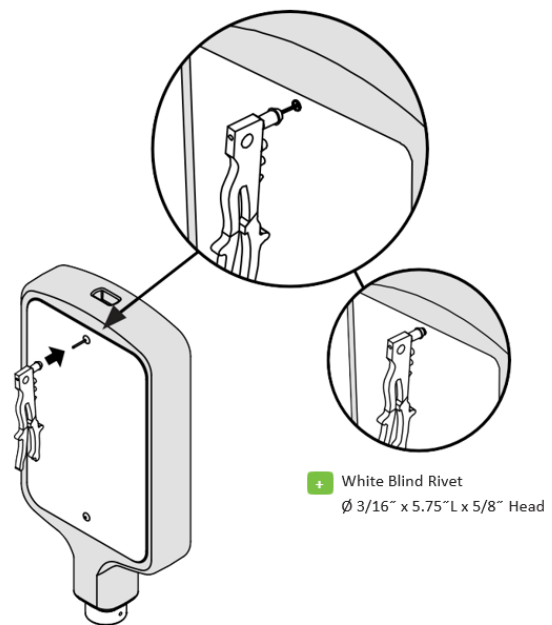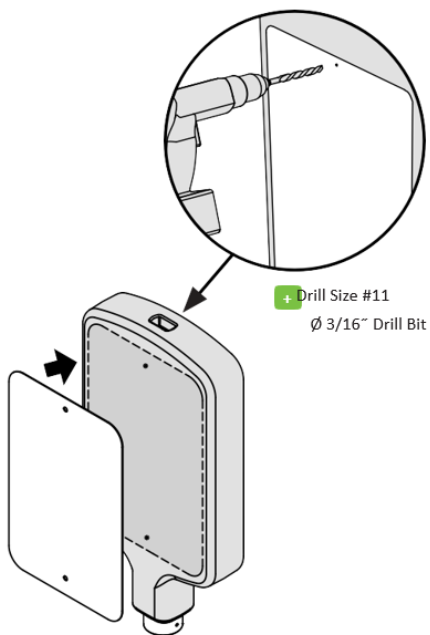

7

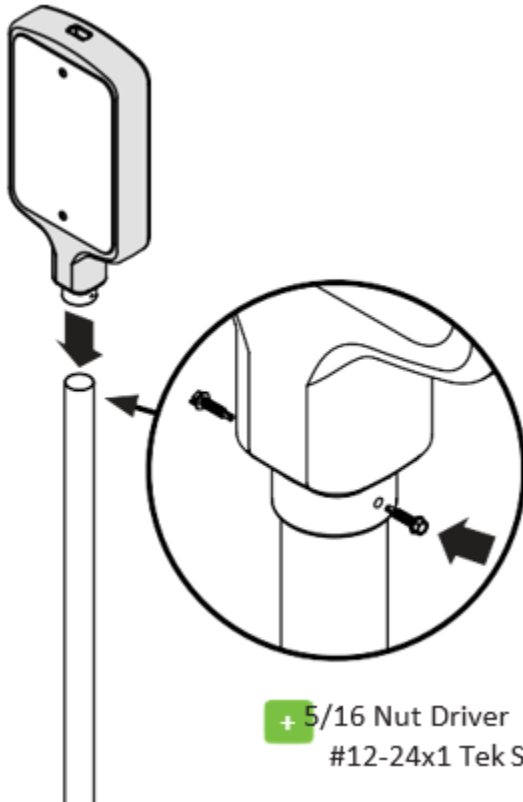

- Slide the Bumper sign topper over the post and secure using the 2 provided self drilling screws.

